



Geberit Montage

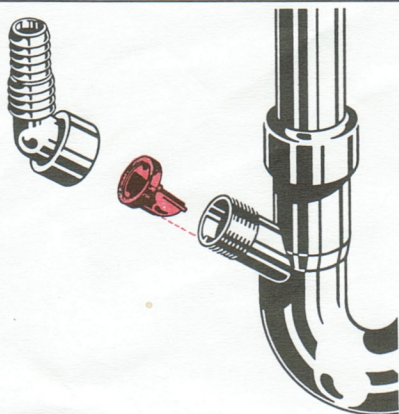

252.666.11.1


Rückschlagklappe
darf nur bei Automaten
ohne Rückschlagventil
eingebaut werden.

Le clapet anti-refoulement
doit uniquement être
monté sur les machines
n'ayant pas de clapet
anti-refoulement intégré.

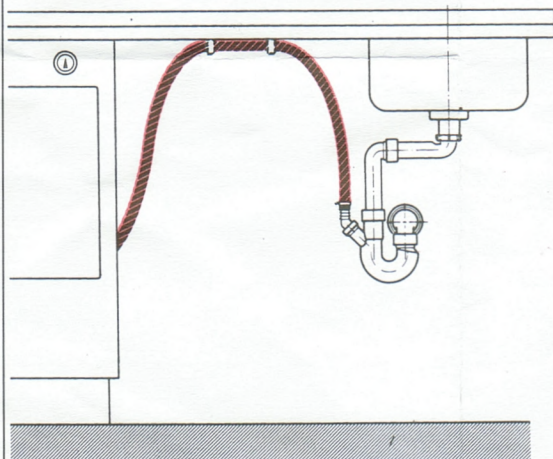

La valvola di non ritorno
a cerniera **può essere**
montata **soltanto** in
utensili **senza** valvola
antiritorno.

Terugslagklep alleen
inbouwen indien de
wasmachine **géén** inge-
bouwd terugslagventiel
heeft.

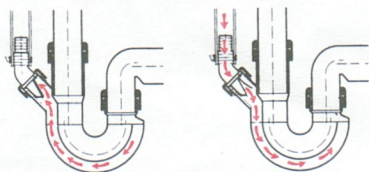

int. 7085-98

996.524.00.0

■ GEBERIT